
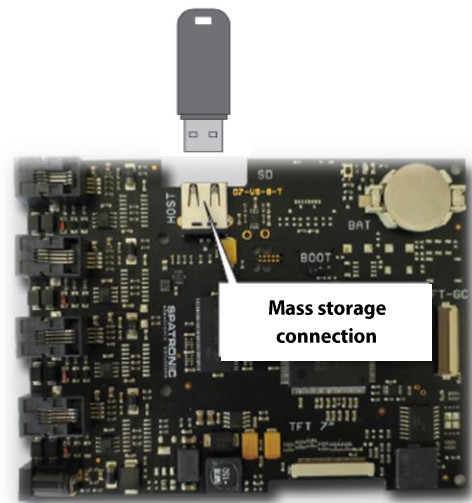


Software Update EmoTouch 3

For the software update of your sauna control *EOS EmoTouch 3* a mass storage medium (type A, max. 32 GB) is required.

Please proceed as follows:

1. Format the mass storage device.
Please select FAT32 as the file system.
(standard setting).
2. Download the latest firmware from the EOS website and unpack the ZIP file onto the empty mass storage device.
3. Remove the control unit from the wall-mounted housing using the removal tools.
4. Then connect the mass storage device to the mass storage connection on the back of the operating unit.
5. Touch the symbol  (settings) for approx. 3 seconds until the pin code prompt is displayed and then enter the code 5349. You will now be taken to the service menu. Touch the symbol  (update) twice and select the symbol  (control unit) in the submenu for the update and confirm the selection. The update is carried out.
6. After completing the update, remove the mass storage device.
7. You must then reset all settings to delivery status and restore the factory settings (all individual settings will be lost). To do this, touch the symbol  (settings) again for approx. 3 seconds and enter the code 5349 (service menu). Touch the symbol  (reset) twice and then touch "All settings" twice in the submenu to perform a system reset.
8. After completing the reset, the control unit restarts and the basic setup (cabin/settings) must be carried out again (see EmoTouch 3 user manual). If the control cannot be configured as usual after the update, the update process has failed and must be repeated.



Note: Make sure that the power supply is not interrupted during the update process! Otherwise the unit may become unusable. In such a case, contact the EOS technical customer service.